




Translation of the Original Operating Manual

For professional use.
Always follow the information in this manual,
particularly the safety instructions and the warning
instructions. Store the manual in a safe place.

Version 02/2019

TOPFINISH GM 1030P

**Airspray manual gun for flat
and round jet nozzles**

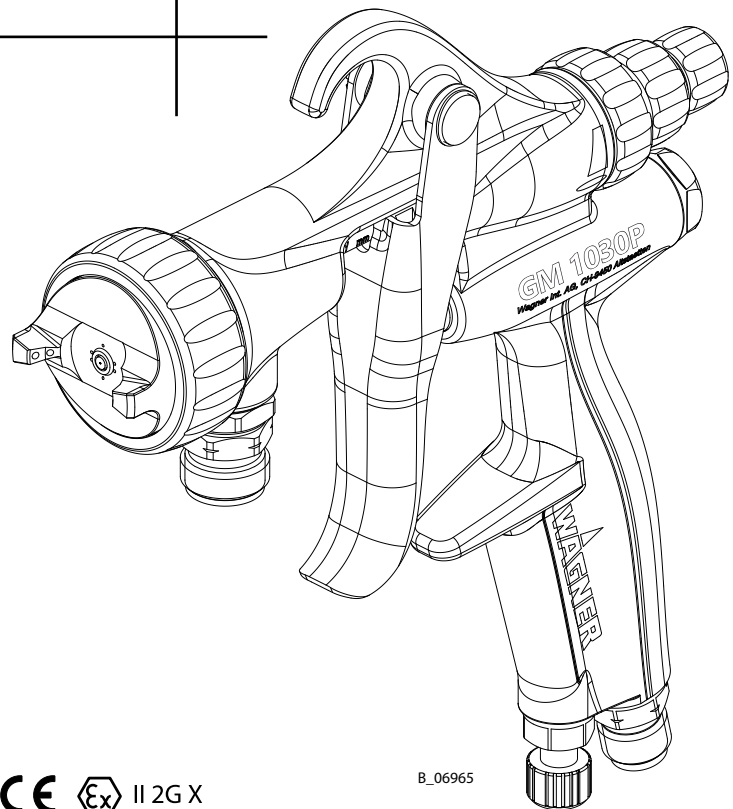

CE  II 2G X

B_06965

Table of Contents

1	ABOUT THESE INSTRUCTIONS	6
1.1	Preface	6
1.2	Warnings, Notices and Symbols in these Instructions	6
1.3	Languages	7
1.4	Abbreviations	7
1.5	Terminology for the Purpose of this Manual	7
2	CORRECT USE	8
2.1	Device Type	8
2.2	Type of Use	8
2.3	For Use in Potentially Explosive Areas	8
2.4	Processible Working Materials	8
2.5	Misuse	8
3	IDENTIFICATION	9
3.1	Explosion Protection Identification	9
3.2	Identification "X"	9
3.3	Type Plate	10
4	BASIC SAFETY INSTRUCTIONS	11
4.1	Safety Instructions for the Operator	11
4.1.1	Electrical Devices and Equipment	11
4.1.2	A Safe Work Environment	11
4.1.3	Personnel Qualifications	12
4.2	Safety Instructions for the Personnel	12
4.2.1	Personal Safety Equipment	12
4.2.2	Safe Handling of WAGNER Spray Devices	13
4.2.3	Grounding the Device	13
4.2.4	Product Hoses	14
4.2.5	Cleaning and Flushing	14
4.2.6	Maintenance and Repair	15
4.2.7	Protective and Monitoring Equipment	15
5	DESCRIPTION	16
5.1	Components	16
5.2	Mode of Operation	16
5.3	Standard Equipment	16
5.4	Data	17
5.4.1	Materials of Paint-wetted Parts	17
5.4.2	Technical Data	17
5.4.3	Dimensions and Connections	17
5.4.4	Air Flow	18

6	ASSEMBLY AND COMMISSIONING	19
6.1	Training of Assembly/Commissioning Personnel	19
6.2	Storage Conditions	19
6.3	Installation Conditions	20
6.4	Installation and Connection	20
6.4.1	Typical Airspray Spraying System	20
6.4.2	Ventilation of the Spray Booth	20
6.4.3	Air Supply Lines	21
6.4.4	Product Supply Lines	21
6.5	Grounding	21
6.6	Safety Checks	21
6.7	Lacquer Preparations	21
6.8	Commissioning	22
6.8.1	Procedure	22
6.8.2	Verifying a Safe Operational Condition	22
7	OPERATION	23
7.1	Training the Operating Personnel	23
7.2	Tasks	23
7.2.1	Starting to Spray with the Airspray	23
7.3	Adjusting the Spray Pattern	24
7.3.1	Adjusting Spray Pattern	25
7.3.2	Setting the Product Flow Rate	25
7.4	Pressure Relief / Work Interruption	27
7.5	Cleaning the Nozzle and Eliminating Nozzle Clogging	28
8	CLEANING AND MAINTENANCE	29
8.1	Cleaning	29
8.1.1	Safety Instructions	29
8.1.2	Cleaning Personnel	29
8.1.3	Flushing and Cleaning the Spray Gun	29
8.2	Maintenance	30
8.2.1	Maintenance Personnel	30
8.2.2	Safety Instructions	30
8.2.3	Safety Checks and Maintenance Intervals	31
8.2.4	Replacing the Product Hose or Air Hose	32
9	TROUBLESHOOTING AND RECTIFICATION	33
10	REPAIR WORK	34
10.1	Repair Personnel	34
10.2	Repair Notes	34
10.3	Tools	35
10.4	Changing Needle Packings	36
10.5	Changing the Air Valve	37
10.6	Changing Shaping Air Regulator	38
10.7	Changing Shaping Air Regulator 110	39
10.8	Tightening Nozzle Nut	40
10.9	Replacing Nozzle or Needle	41



11	FUNCTION TEST	42
12	DISPOSAL	43
13	ACCESSORIES	44
13.1	Air caps	44
13.2	Nozzles and Needles	45
13.3	Nozzles	45
13.4	Hose Sets	46
13.5	Additional Accessories	47
14	SPARE PARTS	48
14.1	How Can Spare Parts Be Ordered?	48
14.2	Spare Parts List Topfinish GM 1030P	49
15	EU DECLARATION OF CONFORMITY	50

1 ABOUT THESE INSTRUCTIONS

1.1 PREFACE

The operating manual contains information about safely operating, maintaining, cleaning and repairing the device.





The operating manual is part of the device and must be available to the operating and service personnel.

The device may only be operated by trained personnel and in compliance with this operating manual.


Operating and service personnel should be instructed according to the safety instructions. This equipment can be dangerous if it is not operated according to the instructions in this operating manual.

1.2 WARNINGS, NOTICES AND SYMBOLS IN THESE INSTRUCTIONS

Warning instructions in this manual highlight particular dangers to users and to the device and state measures for avoiding the hazard. These warning instructions fall into the following categories:

 DANGER	Immediate risk of danger. Non-observance will result in death or serious injury.
 WARNING	Potential danger. Non-observance may result in death or serious injury.
 CAUTION	Potentially dangerous situation. Non-observance may result in minor injury.
 NOTICE	Potentially dangerous situation. Non-observance may result in damage to property.
Note:	Provides information about particular characteristics and how to proceed.

Explanation of warning notice:

 **LEVEL OF DANGER**
This notice warns you of a danger!
 Possible consequences of not observing the warning notice.
 → The measures for preventing the hazard and its consequences.



1.3 LANGUAGES

The operating manual is available in the following languages:

Original operating manual

Language	Order no.
German	2397373

Translation of the original operating manual

Language	Order no.	Language	Order no.
English	2397374	Russian	2406532
French	2397375	Chinese	2406533
Italian	2397376		
Spanish	2397378		

Additional languages on request or at: www.wagner-group.com

1.4 ABBREVIATIONS

Order no.	Order number	SW	Wrench size
ET	Spare part	LV	for low-viscosity (LV) products
K	Marking in the spare parts lists	HV	for high-viscosity (HV) products
Pos	Position	LA	Low air
Stk	Number of pieces	GM	Manual gun

1.5 TERMINOLOGY FOR THE PURPOSE OF THIS MANUAL

Cleaning	
Cleaning	Manual cleaning of devices and device parts with cleaning agent.
Flushing	Internal flushing of paint-wetted parts with flushing agent.
Product pressure generator	Pump or pressure tank.
Personnel qualifications	
Trained person	Is instructed in the tasks assigned to him/her, the potential risks associated with improper behavior as well as the necessary protective devices and measures.
Electrically trained person	Is instructed by an electrician about the tasks assigned to him/her, the potential risks associated with improper behavior as well as the necessary protective devices and measures.
Electrician	Can assess the work assigned to him/her and detect possible hazards based on his/her technical training, knowledge and experience in relevant provisions.
Skilled person in accordance with TRBS 1203 (2010/Revision 2012)	A person who, based on his/her technical training, experience and recent vocational experience, has sufficient technical knowledge in the areas of explosion protection, protection from pressure hazards and electric hazards (if applicable) and is familiar with the relevant and generally accepted rules of technology so that he/she can inspect and assess the status of devices and coating systems based on workplace safety.

2 CORRECT USE

2.1 DEVICE TYPE

Manual gun for manually coating work pieces.

Topfinish GM 1030P

2.2 TYPE OF USE

The spray gun is suitable for atomizing liquid products, particularly coating products, using the Airspray process:

- Non-ignitable products.
- Ignitable products.

WAGNER explicitly prohibits any other use!

The device may only be operated under the following conditions:

- Use the device only to work with the products recommended by WAGNER.
- Do not deactivate safety fixtures.
- Use only WAGNER original spare parts and accessories.
- The operating personnel must be trained on the basis of this operating manual.

2.3 FOR USE IN POTENTIALLY EXPLOSIVE AREAS

The device is suitable for use in potentially explosive areas as defined in Directive 2014/34/EU (ATEX), (see Explosion protection marking Chapter [3.1](#)).



2.4 PROCESSIBLE WORKING MATERIALS

Lacquers and paints, greases, oils and corrosion inhibitor, glue, ceramic glazes, stains.

If you want to spray working materials other than the aforementioned, contact a WAGNER representative.

Note:

Contact your local WAGNER dealer and the lacquer manufacturer if you encounter application problems.

2.5 MISUSE

Misuse can lead to physical injury and/or property damage!

Special attention must be paid that:



- No dry coating products, e.g., powder are processed.
 - no food, medicine or cosmetics are processed.
- It is important to note that the device's materials are not food-safe.

3 IDENTIFICATION

3.1 EXPLOSION PROTECTION IDENTIFICATION

As defined in the Directive 2014/34/EU (ATEX), the device is suitable for use in potentially explosive areas.

Device type: Airspray manual gun Topfinish GM 1030P
 Manufacturer: Wagner International AG
 CH-9450 Altstätten, Switzerland

  II 2G X

CE European Communities
 Ex Symbol for explosion protection
 II Device class II
 2 Category 2 (zone 1)
 G Ex-atmosphere gas
 X Special notice



3.2 IDENTIFICATION "X"

The maximum surface temperature corresponds to the permissible product temperature. This and the permissible ambient temperature can be found in Chapter [5.4.2](#).

Safe Handling of WAGNER Spray Devices

Mechanical sparks can form if the device comes into contact with metal.
 In an explosive atmosphere:

- knocking or pushing metal against metal is to be avoided;
- do not drop the device.

Ignition temperature of the coating product

- Ensure that the ignition temperature of the coating product is above the maximum surface temperature.

Medium supporting atomizing


- To atomize the product, use only weakly oxidizing gases, e.g., air.

Cleaning

If there are deposits on the surfaces, the device may form electrostatic charges. Flames or sparks can form during discharge.

- Remove deposits from the surfaces to maintain conductivity.
- Use only a damp cloth to clean the device.

3.3 TYPE PLATE

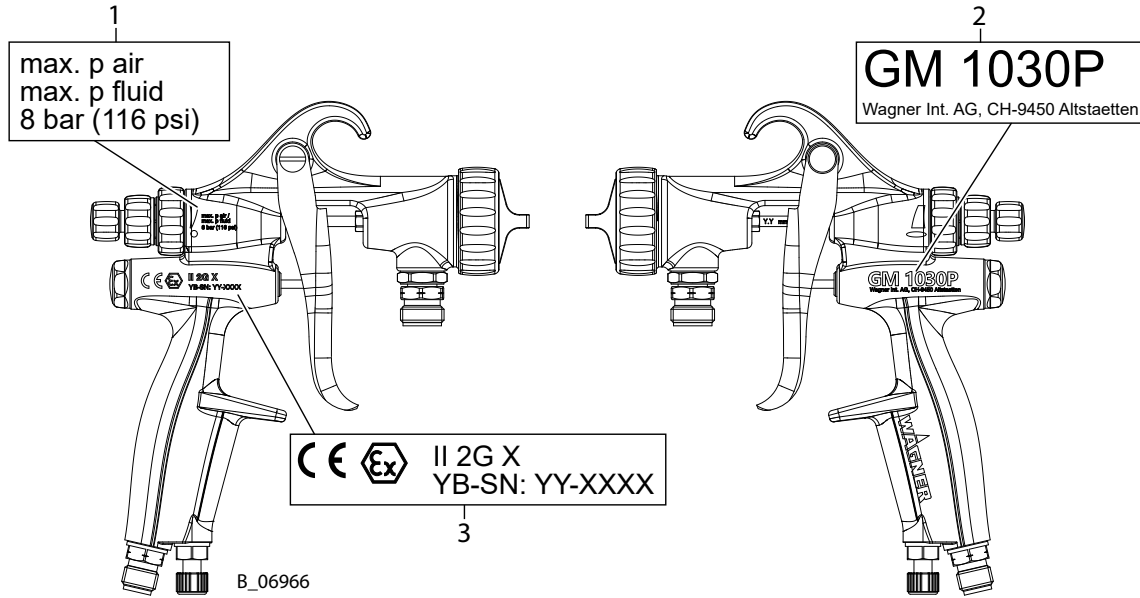

Pos	Designation
1	Maximum air inlet pressure/product pressure
2	Spray gun model and manufacturer
3	Explosion protection identification and year of manufacture serial number (YB-SN)

4 BASIC SAFETY INSTRUCTIONS

4.1 SAFETY INSTRUCTIONS FOR THE OPERATOR

- Keep this operating manual at hand near the device at all times.
- Always follow local regulations concerning accident prevention regulations.



4.1.1 ELECTRICAL DEVICES AND EQUIPMENT

Danger of electric shock!

Danger to life from electric shock

- Prepare device in accordance with the local safety requirements with regard to the operating mode and ambient influences.
- May only be maintained by skilled electricians or under their supervision. With open housings, the mains voltage poses a danger.
- Operate device in accordance with the safety regulations and electrotechnical regulations.
- Must be repaired immediately in the event of problems.
- Decommission if device poses a danger or is damaged.
- Must be de-energized before work is commenced. Inform personnel about planned work. Observe electrical safety regulations.
- Ground all devices to a common grounding point.
- Only operate the device with a properly installed socket with a protective ground wire connection.
- Keep liquids away from electrical devices.



4.1.2 A SAFE WORK ENVIRONMENT

Hazard due to dangerous fluids or vapors!

Severe or fatal injuries due to explosion hazard or inhalation, swallowing or contact with the skin or eyes.

- Ensure that the floor in the working area is static dissipative in accordance with EN 61340-4-1 (resistance must not exceed 100 MΩ).
- Paint mist extraction systems/ventilation systems must be fitted on site according to local regulations.
- Make sure that the ground connection and potential equalization of all system parts are reliable and continuous and can withstand the expected stress (e.g., mechanical stress, corrosion).
- Ensure that product hoses/air hoses adapted to the working pressure are used.
- Ensure that personal protective equipment (see Chapter [4.2.1](#)) is available and is used.
- Ensure that all persons within the working area wear static dissipative shoes. Footwear must comply with EN 20344. The measured insulation resistance must not exceed 100 MΩ.
- Ensure that during spraying, persons wear static dissipative gloves. The grounding takes place via the spray gun handle or the trigger.
- Protective clothing, including gloves, must comply with EN 1149-5. The measured insulation resistance must not exceed 100 MΩ.



- Ensure that there are no ignition sources such as naked flames, sparks, glowing wires, or hot surfaces in the vicinity. No smoking.
- Ensure that the pipe joints, hoses, equipment parts and connections are permanently, technically leak-proof:
 - Periodic preventative maintenance and service (replacing hoses, checking tightness of connections, etc.).
 - Regular monitoring of leaks and defects via visual inspection and odor testing, e.g., daily before commissioning, at the end of work or weekly.
- Ensure that maintenance and safety checks are performed regularly.
- In the event of defects, immediately bring the device or system to a stop and arrange to have repairs carried out immediately.

4.1.3 PERSONNEL QUALIFICATIONS

Danger due to incorrect use of device!

Risk of death due to untrained personnel.

- Ensure that the operating personnel has been instructed by the operator in accordance with the operating manual and the operating instructions. The device must only be operated, maintained and repaired by trained personnel. Refer to the operating instructions for information about the required personnel qualifications.

4.2 SAFETY INSTRUCTIONS FOR THE PERSONNEL

- Always follow the information in this manual, particularly the safety instructions and the warning instructions.
- Always follow local regulations concerning accident prevention regulations.



4.2.1 PERSONAL SAFETY EQUIPMENT

Hazard due to dangerous fluids or vapors!

Serious or fatal injuries due to inhalation, swallowing or contact with the skin or eyes.

- When preparing or working with lacquer and when cleaning the device, follow the processing instructions of the manufacturer of the lacquers, solvents and cleaning agents being used.
- Take the specified protective measures. In particular, wear safety goggles, protective clothing and gloves, as well as hand protection cream if necessary.
- Use a mask or breathing apparatus if necessary.
- For sufficient health and environmental safety: Operate the device in a spray booth or on a spraying wall with the ventilation (extraction) switched on.
- Wear suitable protective clothing when working with hot products.



4.2.2 SAFE HANDLING OF WAGNER SPRAY DEVICES

Hazard due to injection of lacquer or flushing agent into the skin!

The spray jet is under pressure and can cause dangerous injuries. Avoid injection of lacquer or flushing agents:

- Never point the spray gun at people.
- Never reach into the spray jet.
- Before any work on the device, in the event of work interruptions and malfunctions:
 - Switch off the energy/compressed air supply.
 - Relieve the pressure from the spray gun and device.
 - Disconnect the control unit from the mains.
 - In the event of functional faults: remedy the fault as described in Chapter „9 Troubleshooting and Rectification“.
- If needed, the liquid ejection devices must be checked by experts (e.g., WAGNER service technician) at least every 12 months for their work-safe condition in accordance with DGUV regulation 100-500 Chapter 2.29 and Chapter 2.36.
 - For shut down devices, the examination can be suspended until the next start-up.



In the event of skin injuries caused by lacquer or flushing agents:

- Note the lacquer or flushing agent that you have been using.
- Consult a doctor immediately.

4.2.3 GROUNDING THE DEVICE

Danger due to electrostatic charge!


Explosion hazard and damage to the device.

Friction, flowing liquids and air or electrostatic coating processes create charges.

Flames or sparks can form during discharge.

Correct grounding of the entire spraying system prevents electrostatic charges.

- Ensure that all devices and tanks are grounded before each spraying process.
- Ground the work pieces to be coated.
- Ensure that all persons inside the working area are grounded, e.g., that they are wearing static dissipative shoes.
- Wear static dissipative gloves when spraying. The grounding takes place via the spray gun handle or the trigger.

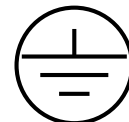


4.2.4 PRODUCT HOSES

Hazard due to bursting of product hose!

The product hose is under pressure and may cause dangerous injuries.

- Ensure that the hose material is chemically resistant to the sprayed products and the flushing agents used.
- Ensure that the product hoses and the fittings are suitable for the pressure generated.
- Ensure that the following information can be seen on the pressure hose used:
 - manufacturer,
 - permissible operating pressure,
 - date of manufacture.
- Make sure that the hoses are laid only in suitable places. Hoses should not be laid in the following places under any circumstances:
 - in high-traffic areas,
 - on sharp edges,
 - on moving parts or
 - on hot surfaces.
- Ensure that the hoses are never run over by vehicles (e.g., fork lifts), or that the hoses are never put under pressure from the outside in any other way.
- Ensure that the hoses are never kinked. Observe maximum bending radii.
- Ensure that no work is ever performed with a damaged hose.
- Make sure that the hoses are never used to pull or move the device.
- The electrical resistance of the product hose, measured at both valves, must be less than 1 MΩ.
- Suction hoses may not be subjected to pressure.

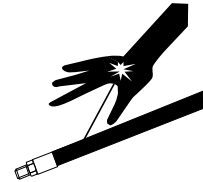

4.2.5 CLEANING AND FLUSHING

Danger due to cleaning and flushing!

Explosion hazard and damage to the device.

- Preference should be given to non-ignitable cleaning and flushing agents.
- When carrying out cleaning work with flammable cleaning agents, make sure that all equipment and resources (e.g., collection tank, funnel, transport cart) are conductive or static dissipative and grounded.
- Observe the specifications of the lacquer manufacturer.
- Ensure that the flash point of the cleaning agent is at least 15 K above the ambient temperature or that cleaning is undertaken at a cleaning station with technical ventilation.
- Never use chloride or halogenated solvents (such as trichloroethane and methylene chloride) with devices containing aluminium or galvanized/zinc-plated parts. They may react chemically thus producing an explosion danger.
- Take measures for workplace safety (see Chapter [4.1.2](#)).
- When commissioning or emptying the device, please note that:
 - depending upon the coating product used,
 - depending on the flushing agent (solvent) used.
 an explosive mixture may temporarily exist inside the lines and items of equipment.



- Only electrically conductive tanks may be used for cleaning and flushing agents.
- The tanks must be grounded.


An explosive gas/air mixture forms in closed tanks.

- Never spray into a closed tank when using solvents for flushing.

External Cleaning

When cleaning the exterior of the device or its parts, also observe the following:

- Relieve the pressure from the device.
- De-energize the device electrically.
- Disconnect the pneumatic supply line.
- Use only moistened cloths and brushes. Never use abrasive agents or hard objects and never spray cleaning agents with a gun. Cleaning the device must not damage it in any way.
- Ensure that no electric component is cleaned with or immersed into solvent.

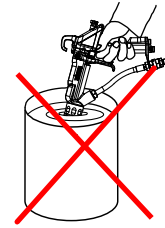

4.2.6 MAINTENANCE AND REPAIR

Danger due to improper maintenance and repair!

Danger to life and equipment damage.

- Only a WAGNER service center or a suitably trained person may carry out repairs and replace parts.
- Use only WAGNER original spare parts and accessories.
- Do not change or modify the device; if change is necessary, contact WAGNER.
- Only repair and replace parts that are listed in Chapter 13 and Chapter 14 that are assigned to the device.
- Do not use any defective components.
- Before all work on the device and in the event of work interruptions:
 - Relieve the pressure from the spray gun, pressure hoses and all devices.
 - Secure the spray gun against actuation.
 - Switch off the energy and compressed air supply.
 - Disconnect the control unit from the mains.
- Observe the operating and service manual for all work.

4.2.7 PROTECTIVE AND MONITORING EQUIPMENT

Danger due to removal of protective and monitoring equipment!


Danger to life and equipment damage.

- Protective and monitoring equipment must not be removed, modified or rendered unusable.
- Regularly check for perfect functioning.
- If defects are detected on protective and monitoring equipment, the system must not be operated until these defects are remedied.

5 DESCRIPTION

5.1 COMPONENTS

Pos	Designation
A	Suspension hook
B	Needle stroke regulator
C	Needle stroke regulator lock
D	Shaping air regulator
E	Air connection
F	Air regulation
G	Trigger
H	Fluid inlet
I	Nozzle / air cap
J	Air cap nut
K	Spray gun housing

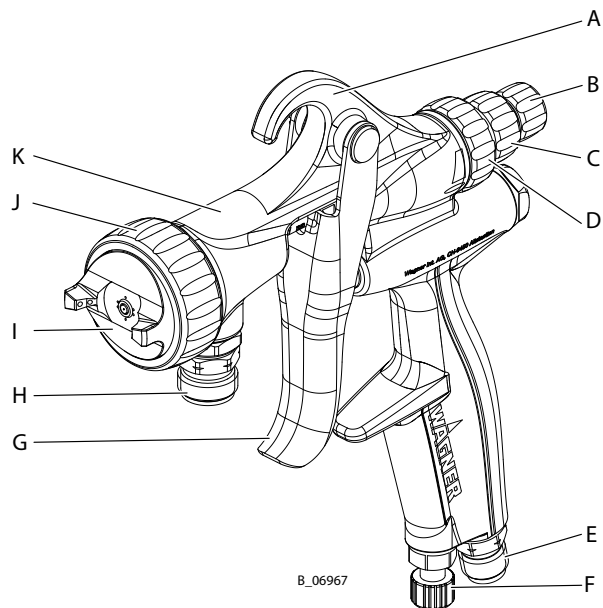

5.2 MODE OF OPERATION

When pressing the trigger (G), first the atomizing air is released and then the material needle is retracted. In this way, the spray product moves through the nozzle (I) to the workpiece surface to be coated. The closing of the spray gun takes place in the reverse order. The product flow rate is dependent on the diameter of the nozzle (I) and the setting of the material pressure on the pressure vessel or product pressure regulator. The spray pattern is adjusted optimally to suit the object being sprayed using the shaping air regulator (D). The flow rate can be regulated by rotating the needle stroke regulator (B) and this setting can be fixed using the needle stroke regulator lock (C). The air supply is regulated using the air regulator (D).

5.3 STANDARD EQUIPMENT

Stk	Order no.	Designation
1	2402429	CE Declaration of Conformity
1	2397373	Operating manual, in German
1	see Chapter 1.3	Operating manual in local language

For special versions the delivery note applies.



5.4 DATA

5.4.1 MATERIALS OF PAINT-WETTED PARTS


Metals	Plastics
Stainless steel 1.4305	PE-UHMW

5.4.2 TECHNICAL DATA

Description	Units	Value
Maximum air inlet pressure	bar; MPa; psi	8; 0.8; 116 recommended: 2; 0.2; 29
Maximum product pressure	bar; MPa; psi	8; 0.8; 116
Fluid inlet	inch	G3/8"
Air connection	inch	G1/4"
Weight	g; oz	486; 17.1
pH range of the product	pH	3.5–9.0
Maximum product temperature	°C; °F	40; 104
Operating temperature	°C; °F	5–40; 41–104

5.4.3 DIMENSIONS AND CONNECTIONS


Dimensions	
Pos	mm; inch
A	168; 6.61
B	189; 7.44
C	41; 1.61
D	G3/8"
E	G1/4"

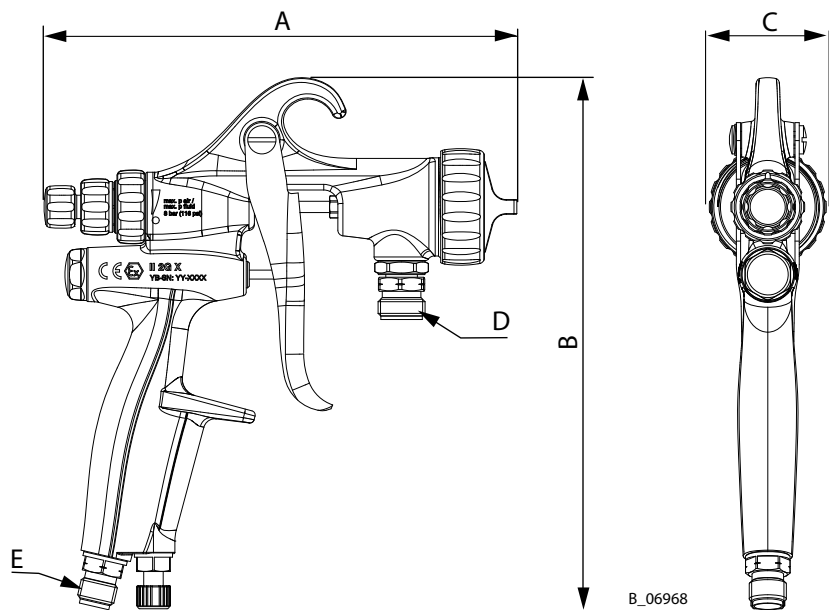

B_06968



5.4.4 AIR FLOW

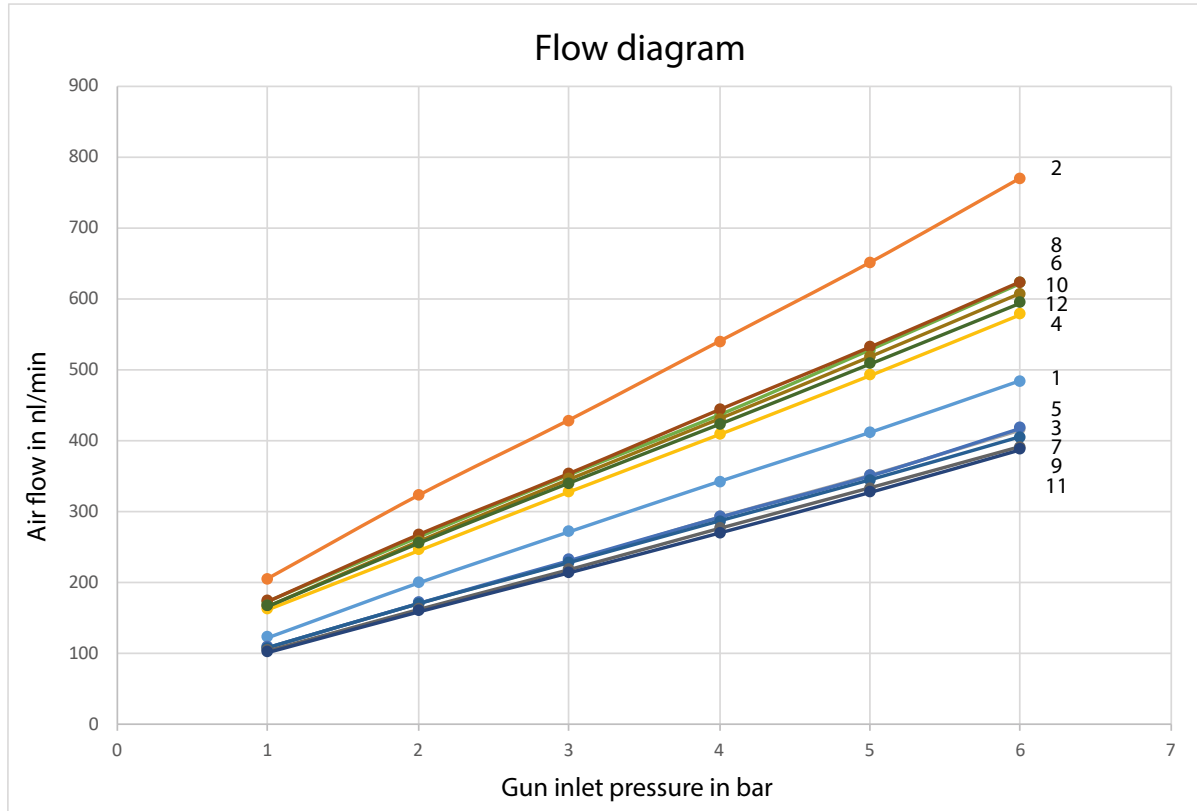

B_07145

Inlet pressure (MPa; bar; psi)		0.1; 1; 14.5	0.2; 2; 29.0	0.3; 3; 43.5	0.4; 4; 58.0	0.5; 5; 72.5	0.6; 6; 87.0
HVLP, round	1	123	200	272	343	412	485
HVLP, flat	2	206	323	429	540	651	770
HVLP+, round	3	109	171	230	293	352	416
HVLP+, flat	4	163	246	329	410	493	579
Conv12, round	5	110	172	232	293	351	418
Conv12, flat	6	173	264	352	437	529	623
Conv14, round	7	108	170	228	287	345	406
Conv14, flat	8	174	268	354	444	532	624
Conv10, round	9	105	163	219	277	334	392
Conv10, flat	10	168	259	346	431	518	607
Conv8, round	11	103	160	215	271	328	388
Conv8, flat	12	167	256	341	424	509	595

Information on air flow in nl/min with an inlet pressure between 0.1; 1; 14.5 and 0.6; 6; 87.0 (MPa; bar; psi).

6 ASSEMBLY AND COMMISSIONING

6.1 TRAINING OF ASSEMBLY/COMMISSIONING PERSONNEL

- The assembly and commissioning personnel must have the technical skills to safely commission the device.
- When assembling, commissioning and carrying out all work, read and follow the operating manuals and safety regulations for the additionally required system components.

A skilled person must check to ensure that the device is in a reliable state after it is assembled and commissioned.

6.2 STORAGE CONDITIONS

Until the point of assembly, the device must be stored in a dry location, free from vibrations and with a minimum of dust. The device must be stored in closed rooms.

The air temperature at the storage location must be between -20 °C and 60 °C (-4 °F and 140 °F).

The relative air humidity at the storage location must be between 10 and 95% (without condensation).

6.3 INSTALLATION CONDITIONS

The air temperature at the installation site must be in a range between 5 °C and 40 °C (41 °F and 104 °F).


The relative air humidity at the installation site must be between 10 and 95% (without condensation).

6.4 INSTALLATION AND CONNECTION

The Airspray manual gun Topfinish GM 1030P must be supplemented with various components to make up a spraying system. The system shown in the figure is only one example of an Airspray spraying system. Your WAGNER distributor would be happy to assist you in creating a spraying system solution that meets your individual needs.

You must familiarize yourself with the operating manuals and the safety regulations of all additional system components before starting commissioning.

6.4.1 TYPICAL AIRSPRAY SPRAYING SYSTEM

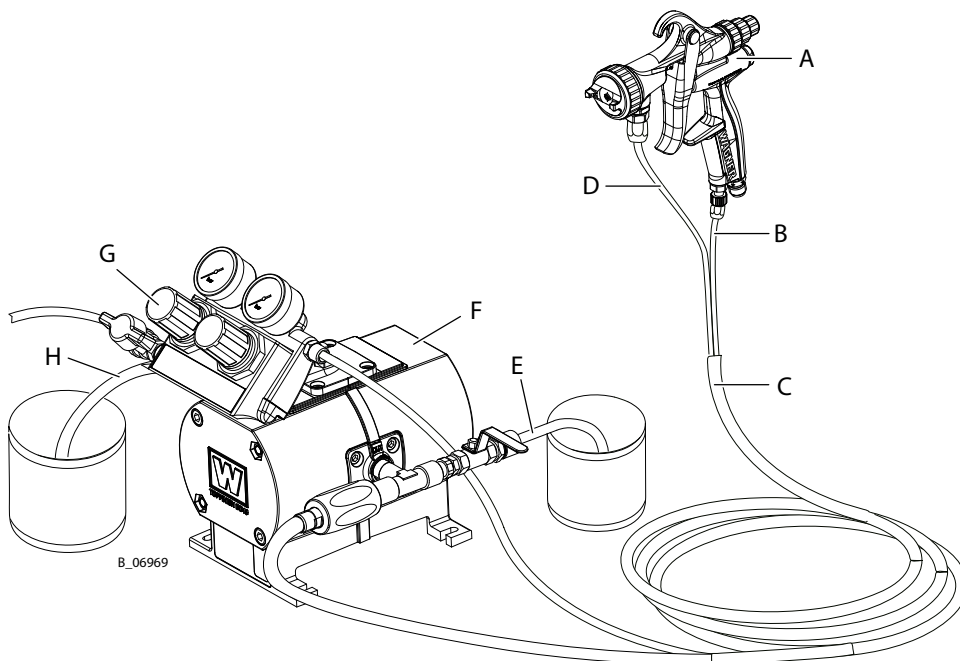

Pos	Designation
A	Airspray spray gun
B	Air hose, electrically conductive
C	Protective hose
D	Product hose

Pos	Designation
E	Return line
F	Product pump
G	Pressure regulator
H	Suction system

6.4.2 VENTILATION OF THE SPRAY BOOTH

- Operate the device in a spray booth approved for the working materials.
- or -
- Operate the device on an appropriate spraying wall with the ventilation (extraction) switched on.
- Observe national and local regulations for the exhaust air speed.

6.4.3 AIR SUPPLY LINES

Ensure that only dry, clean atomizing air is used in the spray gun! Dirt and moisture in the atomizing air worsens the spraying quality and spray pattern.

WARNING

Hose connections!

Risk of injury and damage to the device.

- Do not mix up hose connections of product hose and air hose.



6.4.4 PRODUCT SUPPLY LINES

NOTICE

Impurities in the spraying system!

Spray gun blockage, products harden in the spraying system.

- Flush the spray gun and paint supply with a suitable flushing agent.

DANGER

Bursting hose, bursting threaded joints!

Danger to life from injection of product.

- Ensure that the hose material is chemically resistant to the sprayed products.
- Ensure that the spray gun, fittings and product hose between the device and the spray gun are suitable for the pressure generated in the device.
- Ensure that the following information can be seen on the pressure hose:
 - manufacturer,
 - permissible operating pressure,
 - date of manufacture.



6.5 GROUNDING


WARNING

Heavy paint mist if grounding is insufficient!

Danger of poisoning.

Insufficient paint application quality.

- Ground all device components.
- Ground the work pieces to be coated.

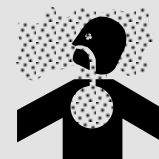

A conductive connection (potential equalization cable) must be established between original tank and the equipment.

6.6 SAFETY CHECKS

- Carry out safety checks in accordance with Chapter [8.2.3](#).

6.7 LACQUER PREPARATIONS

The viscosity of the lacquer is of great importance.

Please read the technical data sheet of the lacquer for optimal processing, viscosity adjustment and intermixing of the product.

6.8 COMMISSIONING

⚠ NOTICE

Impurities in the spraying system!

Spray gun blockage.

- Flush the spray gun and paint supply with a suitable flushing agent before commissioning.

6.8.1 PROCEDURE

1. Connect the product hose to the spray gun and product supply system.
2. Connect air hose to spray gun and to oil-free, dry air supply.
3. Fit air cap over nozzle.
4. Fit the air cap nut and tighten by hand.
Visually check the permissible pressures for all the system components.
5. Make sure that the device and all other conductive parts within the work area are grounded.
6. To perform a tightness check on the entire installation, the product pressure is slowly increased in increments using a suitable medium until the maximum pressure indicated on the type plate is reached.

Note:

Set the operating pressure to 8 bar; 0.8 MPa; 116 psi.

Pull the trigger and check whether the spray gun closes cleanly upon release.

7. Relieve the pressure from the spray gun and device.

6.8.2 VERIFYING A SAFE OPERATIONAL CONDITION

A skilled person must check to ensure that the device is in a reliable state after it is assembled and commissioned.

This includes:

- Carry out safety checks in accordance with Chapter [8.2.3](#).



7 OPERATION

7.1 TRAINING THE OPERATING PERSONNEL

- The operating personnel must be qualified to operate the entire system.
- The operating staff must be familiar with the potential risks associated with improper behavior as well as the necessary protective devices and measures.
- Before work commences, the operating personnel must receive appropriate system training.

7.2 TASKS

Ensure that:


- the regular safety checks are carried out in accordance with Chapter [8.2.3](#),
- commissioning is carried out in accordance with Chapter [6.8](#).

7.2.1 STARTING TO SPRAY WITH THE AIRSPRAY

1. Start up with product supply set to approx. 0.05 to 0.15 MPa; 0.5 to 1.5 bar; 7 to 22 psi operating pressure. See corresponding operating manual.
2. Set air pressure regulator to approx. 0.1 to 0.4 MPa; 1 to 4 bar; 14.5 to 58 psi.
3. Open air regulation (A) below on the gun.
4. Spray on a test object (pull trigger).
5. Adjust the product pressure and air pressure in accordance with the nozzle and object.
6. Use the shaping air controller on the spray gun to adjust the shaping air to atomizing air ratio, until the optimal spray pattern is achieved.

Note:

Repeat points 4 and 6 until the optimum spray pattern is reached (iterative process).

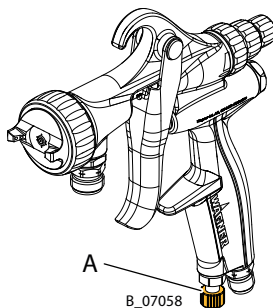







7.3 ADJUSTING THE SPRAY PATTERN

Desired spraying result



Rectifying defects in a spray pattern

Spray pattern	Deviation	Required setting
	Spray pattern is too wide in the middle	– Set a wider spray shape
	Spray pattern is too wide on the ends	– Set a rounder spray shape
	Spray pattern has very coarse droplet distribution	– Increase the atomizing air pressure
	Material application is very thin in the middle of the spray pattern	– Reduce the atomizing air pressure
	The spray pattern is divided in the middle	– Increase the nozzle diameter – Reduce the atomizing air pressure – Increase the product pressure
	Spray patter is too round	– Reduce product pressure – Increase the atomizing air pressure


Note:

The flow rate can be changed by:

- Changing the product pressure or limiting the needle stroke.
- Use of another nozzle (see Chapter [10.9](#), [13.2](#) and [13.3](#)).

7.3.1 ADJUSTING SPRAY PATTERN

The spray pattern can be optimally adjusted to suit the object being sprayed using the shaping air regulator (1). The illustration shows the influence of the shaping air regulator (1) on the spray pattern.

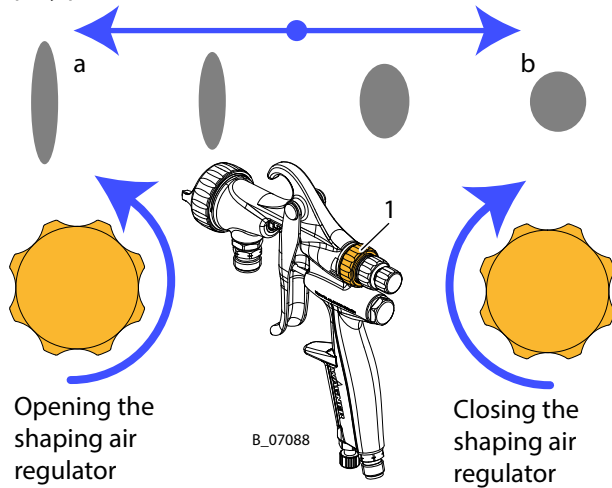



Pos	Description
a	If the shaping air regulator (1) is rotated counterclockwise, the spray pattern is widened and increasingly oval shaped.
b	If the shaping air regulator (1) is rotated clockwise, the spray pattern is narrowed and increasingly round.

7.3.2 SETTING THE PRODUCT FLOW RATE

The flow rate can be adjusted by screwing the needle stroke regulator (1) in or out. The flow rate is increased by rotating it in a counterclockwise direction and is decreased by rotating it in a clockwise direction. If the desired flow rate is reached, the needle stroke regulator (1) can be fixed using the lock (2), to prevent adjustments.

Note: the desired flow rate is primarily to be specified by selecting the corresponding nozzle. The needle stroke regulator (1) only serves to make fine adjustments.

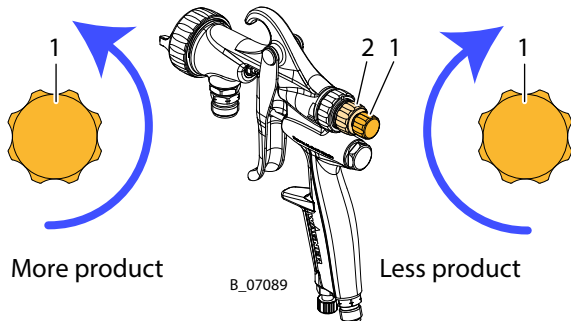

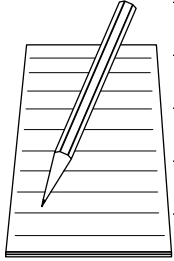

A series of horizontal lines for writing, starting from the top right of the notepad icon and extending across the width of the page. There are 20 lines in total, providing a structured area for notes or instructions.

7.4 PRESSURE RELIEF / WORK INTERRUPTION

The pressure must always be relieved:

- after the spraying tasks are finished,
- before servicing or repairing the spraying system,
- before carrying out cleaning tasks on the spraying system,
- before moving the spraying system to another location,
- before something must be checked on the spraying system,
- before the nozzle, needle or filter is removed on the spray gun.

The components for pressure relief on a CE-compliant spraying system include:

- Air cock with pressure relief hole mounted between compressed air source and pneumatic pump.
- Outlet equipment (return valve) mounted between pump and spray gun.

Pressure relief procedure

1. Close the spray gun.
2. Relieve the air and product pressure in the product pressure generator in accordance with the respective operating manual.
3. Point the spray gun into the grounded metal tank for return product.
4. Open spray gun to relieve the pressure. Avoid splashback.
5. When no further overpressure is detected, close the spray gun.
 - In the case of a clogged nozzle, proceed in accordance with Chapter [7.5](#).
 - If the product hose is obstructed: slowly loosen the hose connection to release the remaining pressure.

7.5 CLEANING THE NOZZLE AND ELIMINATING NOZZLE CLOGGING

⚠ NOTICE


Defective Airspray Nozzle!

Change nozzle in case of leaking.

→ Do not use sharp-edged objects on the Airspray nozzle.

Note: The Airspray nozzle and the needle are normally always changed at the same time! For more information, also see Chapter [10.9](#), Repair. Only loosen and tighten nozzle with the trigger pulled.

1. Relieve the pressure on the spray gun and product pressure generator.
2. Unscrew air cap nut (A).
3. Remove air cap (B).
4. Unscrew nozzle nut (C) with a size 13 wrench, remove air control ring (D) and Airspray nozzle (E).
5. Treat nozzle nut (C) and Airspray nozzle (E) with cleaning agent until all the remaining paint has been dissolved (in case of stubborn soiling, leave them in cleaning agent for a longer period of time).
6. Insert Airspray nozzle (E) in nozzle nut (C). Insert air control ring (D) in spray gun and mount nozzle nut (C) on spray gun with size 13 wrench and tighten it with 12 Nm, 8.85 lbft.
7. Fit air cap (B) on nozzle nut (C).
8. Fit the the air cap nut (A) and tighten by hand.

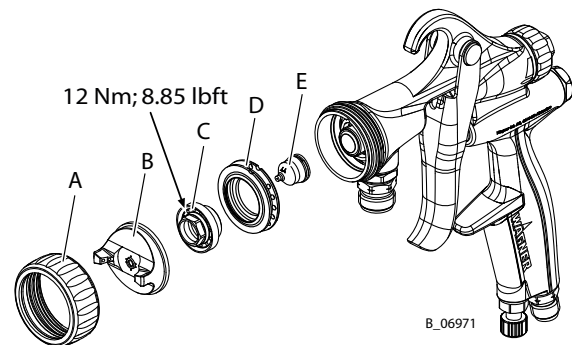

8 CLEANING AND MAINTENANCE

8.1 CLEANING

8.1.1 SAFETY INSTRUCTIONS

WARNING

Incompatibility of the solvent with the product used!

Risk of explosion and danger of poisoning by toxic gases.

- Examine the compatibility of the solvent when in contact with the used products on the basis of the safety data sheets.



8.1.2 CLEANING PERSONNEL

Cleaning work should be undertaken regularly and carefully by qualified and trained personnel. They should be informed of specific hazards during their training. The following hazards may arise during cleaning work:

- Health hazard from inhaling solvent vapors.
- Use of unsuitable cleaning tools and aids.

8.1.3 FLUSHING AND CLEANING THE SPRAY GUN

The spray gun and the device must be cleaned and flushed daily. The cleaning/flushing agents used for cleaning or flushing must correspond with the working material.

1. Visual check: personal safety equipment, grounding and all devices ready to use.
2. Relieve the pressure of the product pressure generator and of the spray gun in accordance with Chapter [7.4](#).
3. Close air pressure regulator.
4. Dismount air cap and clean separately (see Chapter [7.5](#)).
5. Connect spraying system to flushing agent supply in accordance with operating manual for the product pressure generator.
6. Set product pressure generator to a maximum product pressure of 0.8 MPa; 8 bar; 116 psi.
7. Flush product pressure generator in accordance with the respective operating manual.
8. Point the spray gun into the grounded metal tank for return product.
9. Thoroughly flush out the spray gun.
10. Relieve the pressure of the product pressure generator and of the spray gun in accordance with Chapter [7.4](#).
11. Clean the gun body with a cleaning agent recommended by the lacquer manufacturer.
12. Switch on compressed air supply and open air pressure regulator.
13. Press the trigger of the spray gun and thoroughly blow out the air passages.
14. Close the compressed air supply.
15. Dry with a cloth or a blow gun.
16. Dispose of the contents of the tank for return product according to the local regulations.

8.2 MAINTENANCE

8.2.1 MAINTENANCE PERSONNEL

Maintenance work should be undertaken regularly and carefully by qualified and trained personnel. They should be informed of specific hazards during their training.

The following hazards may arise during maintenance work:

- risk to health from inhaling solvent vapors,
- use of unsuitable tools and aids.

A skilled person must ensure that the device is checked for being in a reliable state after maintenance work is completed.

8.2.2 SAFETY INSTRUCTIONS

DANGER

Incorrect maintenance/repair!

Danger to life and equipment damage.

- Only a WAGNER service center or a suitably trained person may carry out repairs and replace parts.
- Use only WAGNER original spare parts and accessories.
- Only repair and replace parts that are listed in the "Spare parts" chapter and that are assigned to the unit.
- Before all work on the device and in the event of work interruptions:
 - Relieve the pressure from the spray gun, pressure hoses and all devices.
 - Secure the spray gun against actuation.
 - Switch off the energy and compressed air supply.
 - Disconnect the control unit from the mains.
- Observe the operating and service manual for all work.



Prior to maintenance

- Flush and clean the system. → Chapter [8.1.3](#)
- Interrupt the air supply.

After maintenance

- Carry out safety checks in accordance with Chapter [8.2.3](#).
- Put the system into operation and check for leaks as described in Chapter [6.8](#).
- Have the system checked for safe condition by a skilled person.
- Function test in accordance with Chapter [11](#).

8.2.3 SAFETY CHECKS AND MAINTENANCE INTERVALS**Every day**

- Check grounding: see Chapter [6.5](#).
- Check hoses, tubes and couplings: see Chapter [8.2.4](#).
- Flush and clean the spray gun in accordance with Chapter [8.1.3](#).

Weekly

- Check spray guns for damage.

Yearly or as required

- In accordance with DGUV regulation 100-500 Chapter 2.29 and 2.36:
 - The liquid ejection devices should be checked by an expert (e.g., WAGNER service technician) for their safe working conditions as required and at least every 12 months.
 - For shut down devices, the examination can be suspended until the next start-up.

8.2.3.1 PRODUCT HOSES, PIPES AND COUPLINGS

The service life of the complete hoses between product pressure generator and application device is reduced due to environmental influences even when handled correctly.

- Check hoses, pipes, and couplings every day and replace if necessary.
- Before every commissioning, check all connections for leaks.
- Additionally, the operator must regularly check the complete hoses for wear and tear as well as for damage at intervals that he/she has set. Records of these checks must be kept.
- The complete hose is to be replaced as soon as one of the two following intervals has been exceeded:
 - 6 years from the date of the hose crimping (see fitting embossing).
 - 10 years from the date of the hose imprinting.

Fitting embossing	Meaning
xxx bar	Pressure
yymm	Crimping date (year/month)
XX	Internal code

Hose imprinting	Meaning
WAGNER	Name/Manufacturer
yymm	Date of manufacture (year/month)
xxx bar (xx MPa) e.g., 8 bar (0.8 MPa)	Pressure
XX	Internal code
DNxx (e.g., DN10)	Nominal diameter

8.2.4 REPLACING THE PRODUCT HOSE OR AIR HOSE

1. Flush and clean the spray gun in accordance with Chapter [8.1.3](#).
2. Relieve the pressure of the spray gun and device.

Product hose


4. Place the size A wrench on the upper part of the product connection and hold it in place.
5. Unscrew the product hose nut using the size B wrench.

Air hose

4. Place the size D wrench on the air connection and hold it in place.
5. Unscrew the air hose nut using the size C wrench.

Assembly:

6. Fit product hose and/or air hose by hand and tighten using two wrenches.

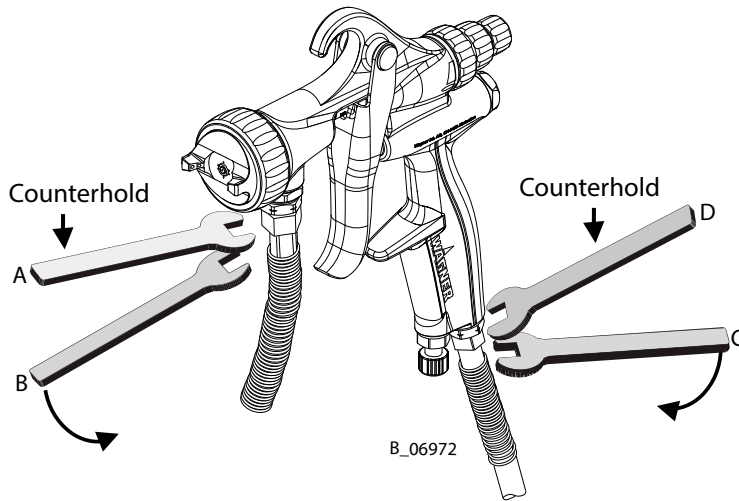

Description	Wrench A	Wrench B	Wrench C	Wrench D
Wrench size	16 mm; 0.62 inch	19 mm; 0.75 inch	17 mm; 0.67 inch	14 mm; 0.55 inch

9 TROUBLESHOOTING AND RECTIFICATION

Functional fault	Cause	Remedy	See Chapter
Insufficient product output	Nozzle too small	Select larger nozzle.	13
	Product pressure too low	Increase product pressure.	
	Filter on product pressure generator blocked	Clean or replace filter.	
	Nozzle is clogged	Clean or replace nozzle.	7.5, 10.9
	Product valve travel set too low	Increase product valve travel by turning the adjusting screw.	
Poor spray pattern	Incorrectly adjusted atomizing air	Readjust the atomizing air.	
	Unfavorable nozzle size	Select a different nozzle.	13
	Product pressure too high/too low	Adapt product pressure.	
	Spray product viscosity too high	Thin product in accordance with the spray product manufacturer's instructions.	
	Damaged nozzle	Attach new nozzle.	10.9
Needle or needle packing leaky	Needle packing (seal) on the needle damaged	Replace needle packing (seal).	10.4
Air valve leaks	Air valve damaged	Replace air valve.	10.5
Spray gun will not shut off correctly	Nozzle nut not tightened enough	Tighten nozzle nut.	10.8
	Nozzle or needle damaged	Replace nozzle or needle.	10.9

10 REPAIR WORK

10.1 REPAIR PERSONNEL

Repair work should be undertaken carefully by qualified and trained personnel. They should be informed of specific hazards during their training.

The following hazards may arise during repair work:

- risk to health from inhaling solvent vapors,
- use of unsuitable tools and aids.

A skilled person must check to ensure that the device is in a reliable state after it is repaired. Carry out function test in accordance with Chapter [11](#).

10.2 REPAIR NOTES

DANGER

Incorrect maintenance/repair!

Danger to life and equipment damage.

- Only a WAGNER service center or a suitably trained person may carry out repairs and replace parts.
- Use only WAGNER original spare parts and accessories.
- Only repair and replace parts that are listed in the "Spare parts" chapter and that are assigned to the unit.
- Before all work on the device and in the event of work interruptions:
 - Relieve the pressure from the spray gun, pressure hoses and all devices.
 - Secure the spray gun against actuation.
 - Switch off the energy and compressed air supply.
 - Disconnect the control unit from the mains.
- Observe the operating and service manual for all work.



Before Repair Work

- Flush and clean the system in accordance with Chapter [8.1.3](#).
- Interrupt the air supply.

After Repair Work

- Carry out safety checks in accordance with Chapter [8.2.3](#).
- Put the system into operation and check for leaks as described in Chapter [6.8](#).
- Have the system checked for safe condition by a skilled person.
- Function test in accordance with Chapter [11](#).

10.3 TOOLS

The following tools are required for carrying out the repair work on the gun described below:

- Gun wrench sizes 17mm; 16mm; 14mm; 13mm; 12mm; 7mm. For the repairs described below only wrench sizes 16mm; 13mm; and 7mm are needed.
- Allen wrench, 10 mm

Assembly aids:

Order no.	Quantity	Designation	Smaller tanks
9992831	1 pc \triangleq 50 ml	Loctite [®] 542	
9992590	1 pc \triangleq 50 ml	Loctite [®] 222	
9992698	1 pc \triangleq 200 g	Vaseline white, PHHV II	
9992616	1 pc \triangleq 1 kg can	Molykote [®] DX grease	50 g tube \triangleq order no. 2355419
V0000000001	1 pc \triangleq 10 g	Grease packet	

Brand notice:


The brands specified in this document are property of the respective owners. Loctite[®], for example, is a registered brand of Henkel.

Note:

The grease packet supplied with the spray gun (order no. V0000000001) can be used as a replacement for Vaseline (order no. 9992698) as well as Molykote[®] (order no. 9992616).

10.4 CHANGING NEEDLE PACKINGS

1. Flush and clean the spray gun in accordance with Chapter [8.1.3](#).
2. Relieve the pressure of the product pressure generator and of the spray gun in accordance with Chapter [7.4](#).
3. Unscrew needle stroke regulator (A).
4. Carefully pull out needle from the rear. As necessary, slightly loosen the clamping sleeve (C) of the needle packing (B).
5. Loosen the clamping sleeve (C) of the needle packing (B) with a size 7 wrench.
6. Unscrew needle packing (B) and coat needle packing (B) with Vaseline (D) and insert it.
7. Place clamping sleeve (C) and tighten it by one rotation.
8. Insert the needle and fix it with the needle stroke regulator.
9. Tighten the clamping sleeve (C).

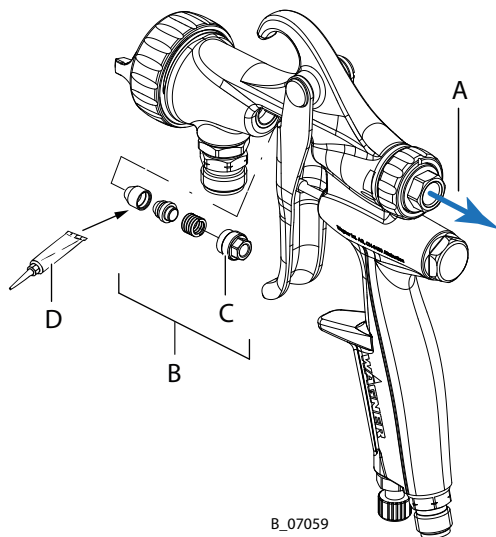

ⓘ NOTICE


Unsuitable tool!

Damage to seals and sealing surfaces.

→ Hold the needle with pliers or a similar tool.


10.5 CHANGING THE AIR VALVE

1. Flush and clean the spray gun in accordance with Chapter [8.1.3](#).
2. Relieve the pressure of the product pressure generator and of the spray gun in accordance with Chapter [7.4](#).
3. Unscrew locking cap (A) with a size 16 wrench.
4. Carefully remove pressure spring (B) and unscrew air valve (C) with a size 10 Allen wrench.
5. Replace air valve (C), coat with Loctite® 542 (D) and put back in, together with the pressure spring (B), then tighten with 6 Nm.
6. Apply Loctite® 542 (D) to the locking cap (A) and retighten with a size 16 mm wrench and a torque of 12 Nm; 8.85 lbft.

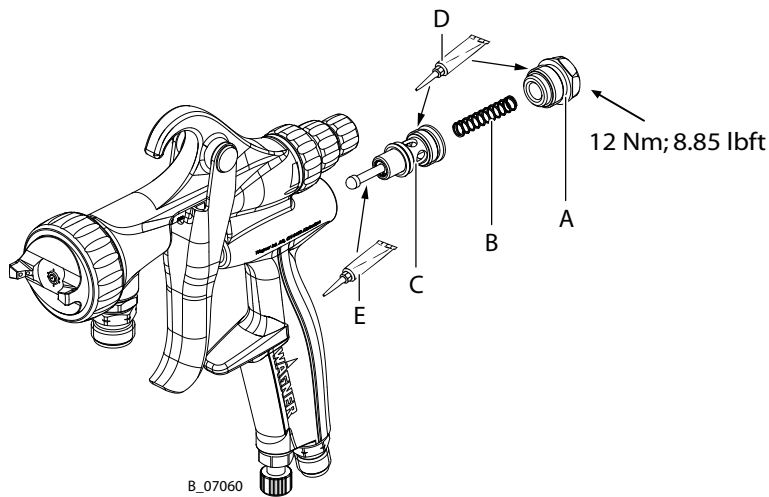

10.6 CHANGING SHAPING AIR REGULATOR

1. Flush and clean the spray gun in accordance with Chapter [8.1.3](#).
2. Relieve the pressure of the product pressure generator and of the spray gun in accordance with Chapter [7.4](#).
3. Carefully insert rod seal (A) in the foreseen notch on the gun. Ensure that the installation position is correct (see sectional view). Ideally, place the rod seal (A) on a flat surface and press gun body onto the seal without tilting it.
4. Completely coat the threaded sleeve (B) with Loctite® 542 (C) and Vaseline (D) and then tighten it with a size 13 wrench and a torque of 9 Nm; 6.64 lbft.

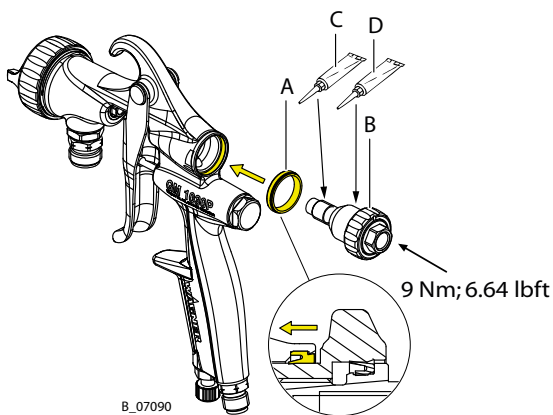

10.7 CHANGING SHAPING AIR REGULATOR 110


1. Flush and clean the spray gun in accordance with Chapter [8.1.3](#).
2. Relieve the pressure of the product pressure generator and of the spray gun in accordance with Chapter [7.4](#).

Disassembly:


1. First, unscrew grub screw (C) with a size 1.5 Allen wrench and pull air shape regulator top piece (D) out from the rear.
2. Unscrew threaded sleeve (B) with a size 13 wrench.
If the air adjustment knob (G) gets stuck with the gun housing when unscrewing, screw it back in and completely unscrew the threaded sleeve (B).
3. If necessary, pull out the rod seal (A) with a small screwdriver and then replace it with a new one.

Assembly:

1. Carefully insert rod seal (A) in the foreseen notch on the gun. Ensure that the installation position is correct (see sectional view). Ideally, place the rod seal (A) on a flat surface and press gun body onto the seal without tilting it.
2. Coat the threaded sleeve (B) with Loctite® 542 (E) and Vaseline (F) and then tighten it with a size 13 wrench and a torque of 9 Nm.

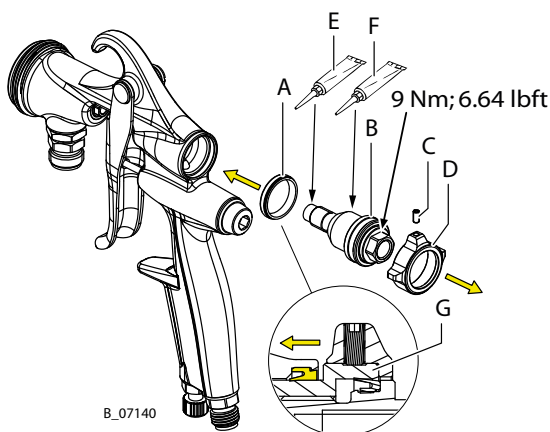

3. Lock air shape regulator top piece (D) in the position shown on the right, with completely opened air shape regulator using grub screw.

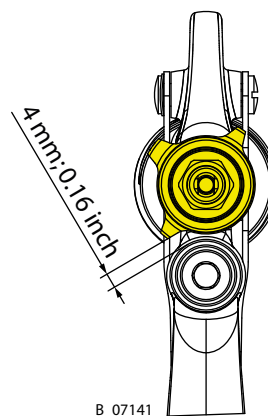


10.8 TIGHTENING NOZZLE NUT

1. Flush and clean the spray gun in accordance with Chapter [8.1.3](#).
2. Relieve the pressure of the product pressure generator and of the spray gun in accordance with Chapter [7.4](#).
3. Remove air cap nut (A) and air cap (B).
4. Check nozzle nut (C) for correct seating and, if necessary, tighten with a size 13 wrench. Coat inside with Molykote® DX (E).

Note: Tighten only with the trigger pulled!

5. Fit air cap (B) back onto nozzle nut (C) and tighten air cap (A) by hand.

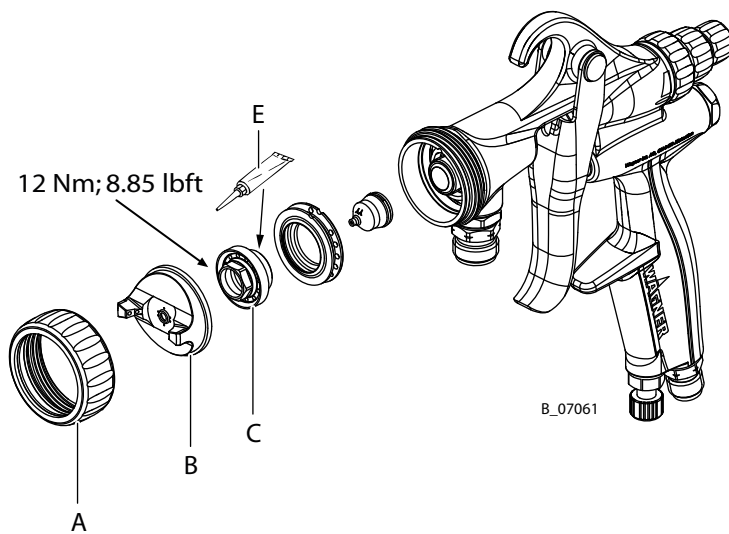

10.9 REPLACING NOZZLE OR NEEDLE


Note: Only loosen and tighten nozzle with the trigger pulled.

Disassembly:

1. Flush and clean the spray gun in accordance with Chapter 8.1.3.
2. Relieve the pressure of the product pressure generator and of the spray gun in accordance with Chapter 7.4.
3. Unscrew needle stroke regulator (G) by hand.
4. Carefully pull needle (F) out from the rear (if necessary, loosen the clamping sleeve (H) of the needle packing).
5. Remove air cap nut (A) and air cap (B).
6. Unscrew nozzle nut (C) with a size 13 wrench, remove air control ring (D) and nozzle (E).
7. Treat parts with cleaning agent until all remaining paint has been dissolved.

Assembly:

1. Place nozzle (E) in nozzle nut (C) and insert air control ring (D) in the spray gun. Tighten nozzle nut (C) with a size 13 wrench and with a torque of 12 Nm; 8.85 lbft.
2. Insert air cap (B) and tighten by hand with air cap nut (A).
3. Cover needle (F) with Vaseline (I). Loosen clamping sleeve (H) of the needle packing and carefully insert needle (F).
4. Unscrew needle stroke regulator (G) by hand and retighten clamping sleeve (H).

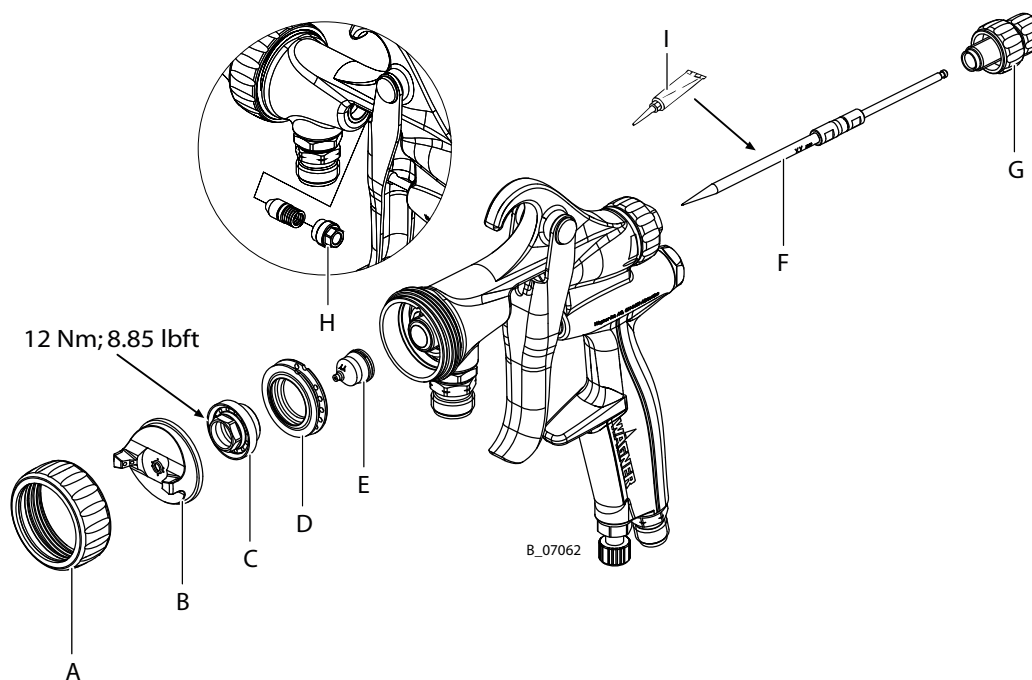

11 FUNCTION TEST

After all repair work, the spray gun must be checked for safe condition before recommissioning. The necessary scope of inspection and testing depends on the repair carried out and must be documented by the repair personnel.

Assembly inspection	
Activity	Means
1. Leak test <ul style="list-style-type: none"> – Connect 1 bar; 0.1 MPa; 14.50 psi air pressure to the air connection and product connection. Place the spray gun completely into the water bath and check all sealing points with 4 bar; 0.4 MPa; 58 psi for leaks. At 4 bar; 0.4 MPa; 58 psi, a slight leak can be tolerated. 	Air connection, 1 bar Water bath
Injection and Final Inspection	
Activity	Means
2. Trigger lever function test <ul style="list-style-type: none"> – The trigger lever must be pulled as far as it will go. Make sure that the trigger lever can move slightly in its rest position. 	Manual inspection
3. Leak test <ul style="list-style-type: none"> – Connect the spray gun, slowly increase the product pressure in increments using a suitable medium until the maximum pressure (8 bar, 0.8 MPa; 116 psi) specified on the spray gun is reached. – Trigger and flush the spray gun multiple times. – Check the following: <ul style="list-style-type: none"> – Is the product connection sealed when the gun is closed? – Is the product valve sealed? – Is there no product discharge at the valve rod seal? If product leaks, tighten clamping sleeve: Clamping sleeve of the needle packing on the valve rod must be tightened. If necessary, tighten the clamping sleeve with the wrench. (In doing so, it is important to make sure that the valve rod still runs smoothly and the gun closes reliably). 	Visual inspection Product connection, 8 bar Air connection, 3 bar Size 7 mm wrench for the clamping sleeve
Activity	Means
4. Checking the switching sequence <ul style="list-style-type: none"> – Mount nozzle and air cap nut. – Set the injection pressure to 8 bar; 0.8 MPa; 116 psi, pull the trigger slowly, note the switching sequence "Switch on" and "Switch off". Switch on: shaping air on, product on Switch off: product off, shaping air off 	Visual inspection
5. Flush the spray gun <ul style="list-style-type: none"> – Switch off the air and product supply, pull trigger lever and flush spray gun or blow out with air. Flush the gun without the valve and air cap. In doing so, you can remove the air connection hose. – When almost no more product comes out, remove the product connection hose and blow the rest of the test medium out of the spray gun using an air gun. 	

12 DISPOSAL

When the devices must be scrapped, please differentiate the disposal of the waste materials.

The following materials have been used:

- Stainless steel
- Aluminum
- Brass
- Plastics

The consumable products (lacquers, adhesives, solvents) must be disposed of in accordance with the applicable specific standards.

13 ACCESSORIES

13.1 AIR CAPS


Order no.	Description	Processible Working Materials	
2401161	Air cap 0.3-1.8 mm CONV 8	Base lacquer, colored lacquer, clear lacquer, separating agent, anti-dust	 B_07078
2401165	Air cap 2.0-2.5 mm CONV 8		
2401166	Air cap 3.0 mm CONV 8		
2401167	Air cap 3.5 mm CONV 8		
2401168	Air cap 0.3-1.8 mm CONV 10	Stain, primer, filler, base lacquer, colored lacquer, clear lacquer, spraying plaster, separating agent	 B_07078
2401169	Air cap 2.0-2.5 mm CONV 10		
2401170	Air cap 3.0 mm CONV 10		
2401171	Air cap 3.5 mm CONV 10		
2401172	Air cap 0.3-1.8 mm CONV 12	Base lacquer, colored lacquer, clear lacquer, separating agent	 B_07078
2401173	Air cap 2.0-2.5 mm CONV 12		
2401174	Air cap 0.3-1.8 mm CONV 14	Base lacquer, colored lacquer, clear lacquer, separating agent, anti-dust	 B_07078
2401175	Air cap 2.0-2.5 mm CONV 14		
2401176	Air cap 0.3-1.8 mm HVLP Plus	Stain, primer, filler, base lacquer, colored lacquer, clear lacquer, glaze	 B_07079
2401177	Air cap 2.0-2.5 mm HVLP Plus		
2401178	Air cap 3.0 mm HVLP Plus		
2401179	Air cap 3.5 mm HVLP Plus		
2401180	Air cap 0.3-1.8 mm HVLP	Stain, primer, filler, base lacquer, colored lacquer, glazes, spraying plaster	 B_07080
2401181	Air cap 2.0-2.5 mm HVLP		
2401182	Air cap 3.0 mm HVLP		
2401183	Air cap 3.5 mm HVLP		

General application areas: wood, general industry, metal, glass, plastic

13.2 NOZZLES AND NEEDLES


Topfinish GM 1030P nozzle needle sets are available in the following sizes:

Order no.	Description
2400785	GM 1030P nozzle needle set 0.3 mm
2400786	GM 1030P nozzle needle set 0.5 mm
2400787	GM 1030P nozzle needle set 0.8 mm
2400788	GM 1030P nozzle needle set 1.0 mm
2400789	GM 1030P nozzle needle set 1.2 mm
2400790	GM 1030P nozzle needle set 1.5 mm
2400791	GM 1030P nozzle needle set 1.8 mm
2400792	GM 1030P nozzle needle set 2.0 mm
2400793	GM 1030P nozzle needle set 2.2 mm
2400794	GM 1030P nozzle needle set 2.5 mm
2400795	GM 1030P nozzle needle set 3.0 mm
2400796	GM 1030P nozzle needle set 3.5 mm

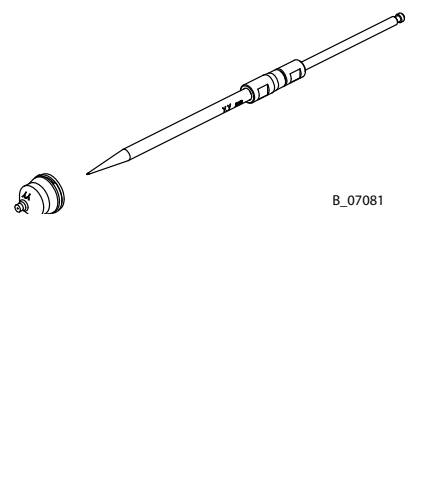
**13.3 NOZZLES**

Topfinish GM 1030P nozzles are individually available in the following sizes:

Order no.	Description
2404486	GM 1030P nozzle 0.3 mm
2404487	GM 1030P nozzle 0.5 mm
2404488	GM 1030P nozzle 0.8 mm
2404489	GM 1030P nozzle 1.0 mm
2404491	GM 1030P nozzle 1.2 mm
2404492	GM 1030P nozzle 1.5 mm
2404493	GM 1030P nozzle 1.8 mm
2404494	GM 1030P nozzle 2.0 mm
2404495	GM 1030P nozzle 2.2 mm
2404496	GM 1030P nozzle 2.5 mm
2404497	GM 1030P nozzle 3.0 mm
2404498	GM 1030P nozzle 3.5 mm

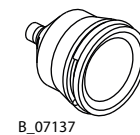

13.4 HOSE SETS

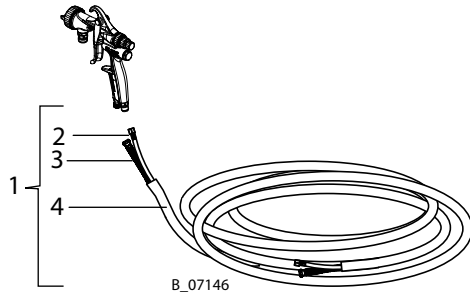







Pos	Designation
1	Hose set, complete*
2	Air hose
3	Product hose
4	Protective hose

* For configurations, see following table

Stk	Order no.	Designation
1	2405455	LP hose set Flex DN6 7.5 m
1	2405456	LP hose set Flex DN6 10 m
1	2405457	LP hose set PA DN6 7.5 m
1	2405458	LP hose set PA DN6 10 m

13.5 ADDITIONAL ACCESSORIES

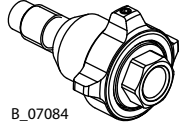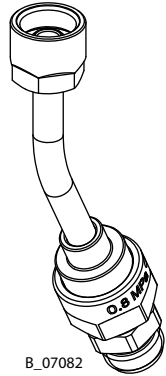Order no.	Description	
V2000830144	Compressed air hose ø 8 mm, outer - ø 14 mm, electr. conductive, per meter	
V0010102000	Hose connector, 8 mm brass	
V0010103000	Union nut G 1/4" nickel-plated brass	
V7013150000	Hose clamp 13/15	
2403453	Shaping air regulation 110 set	 B_07084
2401072	Product tube with filter, complete	 B_07082
3204604	Edge filter 60 mesh	
3204605	Edge filter 100 mesh	
9999002	Edge filter 200 mesh	
V0000104000	Double ball joint, air 1/4"	
2324766	Swivel joint air	
V0000102100	Swivel joint, 3/8" I/A	

14 SPARE PARTS

14.1 HOW CAN SPARE PARTS BE ORDERED?

Always supply the following information to ensure delivery of the right spare part:

Order number, designation and quantity

The quantity need not be the same as the number given in the quantity column "**Stk**" on the list. This number merely indicates how many of the respective parts are used in each component.

The following information is also required to ensure smooth processing of your order:

- billing address
- delivery address
- name of the person to be contacted in the event of any queries
- type of delivery (normal mail, express delivery, air freight, courier, etc.).

Identification in spare parts lists

Explanation of column "**K**" (labeling) in the following spare parts lists:

- ◆ Wearing parts. Wearing parts are not included in the warranty terms.
- ★ Included in service set

Note:

These parts are not covered by warranty terms.

- Not part of standard equipment, however, available as special accessory.

Explanation of order no. column

- Item not available as spare part.
- / Position does not exist.

DANGER

Incorrect maintenance/repair!


Danger to life and equipment damage.

- Only a WAGNER service center or a suitably trained person may carry out repairs and replace parts.
- Use only WAGNER original spare parts and accessories.
- Only repair and replace parts that are listed in the "Spare parts" chapter and that are assigned to the unit.
- Before all work on the device and in the event of work interruptions:
 - Relieve the pressure from the spray gun, pressure hoses and all devices.
 - Secure the spray gun against actuation.
 - Switch off the energy and compressed air supply.
 - Disconnect the control unit from the mains.
- Observe the operating and service manual for all work.





14.2 SPARE PARTS LIST TOPFINISH GM 1030P

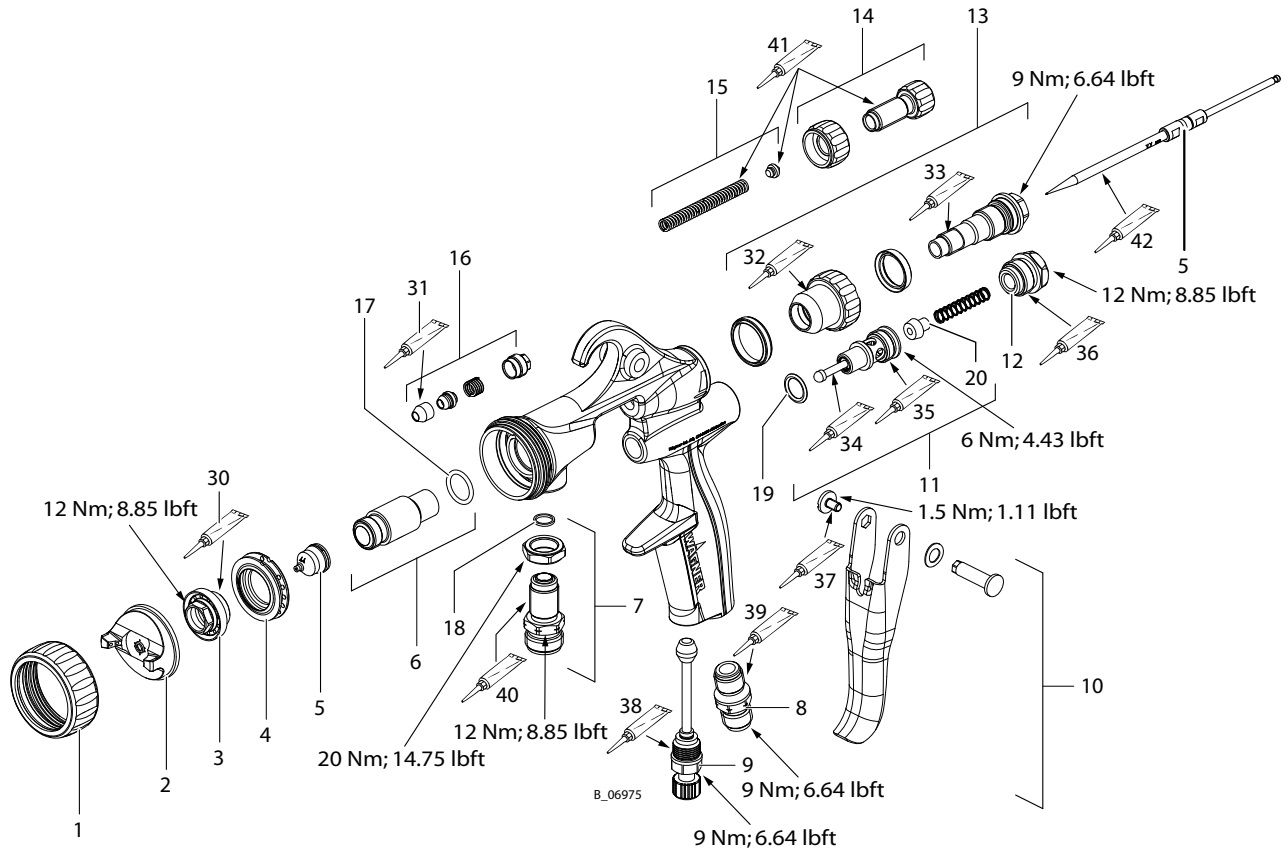

Pos	K	Stk	Order no.	Description
1		1	2400769	Air cap nut, complete
2		1	--	Air cap (see Chapter 13.1)
3		1	2400782	Nozzle nut
4	★ ◆	1	2400779	Air control ring
5	◆	1	--	Nozzle/needle set (see Chapter 13.2)
6		1	2400776	Nozzle holder set
7		1	2400775	Product connection set
8		1	2400781	Air connection
9		1	2400773	Air volume regulation, complete
10		1	2400774	Trigger set
11		1	2400772	Air valve, complete
12		1	2400780	Lock cap
13		1	2400783	Shaping air regulation set
14		1	2400778	Needle stroke regulator set
15	★	1	2400777	Needle spring set
16	★ ◆	1	2400771	Needle packing set
17	★	1	--	O-ring
18	★	1	--	Sealing ring
19	★	1	--	O-ring
20	★ ◆	1	--	Air valve cone
30		1	9992616	Molykote® DX grease
31		1	9992698	Vaseline white, PHHV II
32		1	9992698	Vaseline white, PHHV II

Pos	K	Stk	Order no.	Description
33		1	9992831	Loctite® 542
34		1	9992698	Vaseline white, PHHV II
35		1	9992831	Loctite® 542
36		1	9992831	Loctite® 542
37		1	9992590	Loctite® 222
38		1	9992831	Loctite® 542
39		1	9992831	Loctite® 542
40		1	9992831	Loctite® 542
41		1	9992616	Molykote® DX grease
42		1	9992698	Vaseline white, PHHV II
	●	1	2400784	Service set GM 1030P
	●	1	60-104	Air inlet screw fitting, NPS
	●	1	2403450	Product connection set, NPS

◆ = Wearing parts

★ = Included in service set

● = Not part of the standard equipment but available as a special accessory.

15 EU DECLARATION OF CONFORMITY

Herewith we declare that the supplied version of:

Topfinish GM 1030P

complies with the following guidelines:



2006/42/EC
2014/34/EU

Applied standards, in particular:

EN ISO 12100:2010	EN 1127-1:2011
EN 1953:2013	EN ISO 80079-36:2016
EN ISO 13732-1:2008	EN ISO/IEC 80079-34:2011
EN 14462:2015	

Applied national technical standards and specifications, in particular:


DGUV regulation 100-500 Chapter 2.29
DGUV regulation 100-500 Chapter 2.36
TRGS 727

Identification:   II 2G X

EU Declaration of Conformity

The EU Declaration of Conformity is enclosed with this product. If needed, further copies can be ordered through your WAGNER dealer by specifying the product name and serial number.

Order number: 2402429



Order no. 2397374
Edition 02/2019

Germany

J. Wagner GmbH
Otto-Lilienthal-Str. 18
Postfach 1120

88677

Markdorf

Phone +49/ (0)7544 / 5050

Telefax +49/ (0)7544 / 505200

E-Mail ts-liquid@wagner-group.com

Switzerland

Wagner International AG
Industriestrasse 22

9450

Altstätten

Phone +41/ (0)71 / 757 2211

Telefax +41/ (0)71 / 757 2222

More contact addresses:

www.wagner-group.com

Subject to changes without notice